
Agaho 427L



Fitting Instruction

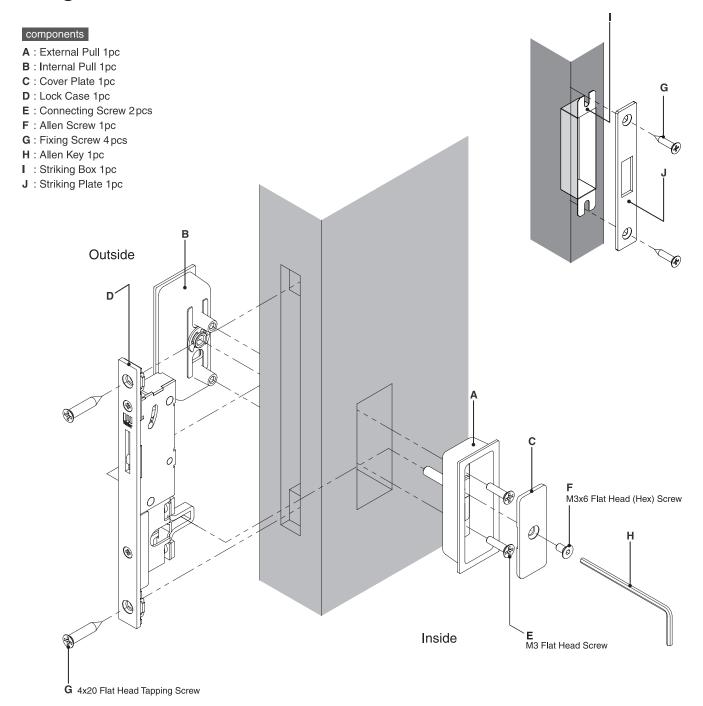

- 1. Refer to the Cut-Out dimensions on the back, cut out the pockets on the door and the door frame.
- 2. Fix Lock Case (D) to the door with Fixing Screw (G).
- 3. Place External Pull (A) with its rod passing through the shifter hole of Lock Case (D), and then connect with Internal Pull (B) using Connecting Screw (E).

E-mail: info@west-inx.com

- 4. Fix Cover Plate (C) on the External Pull (A) with Allen Screw (F) using Allen Key (H).
- 5. Fix Striking Box(I) and Striking Plate(J) to the door frame with Fixing Screw(G).
- 6. Confirm that the lock functions properly.




Sliding Door Lock Set

Agaho 427L



Cut-Out Dimensions (mm)

Frame Side Door Side

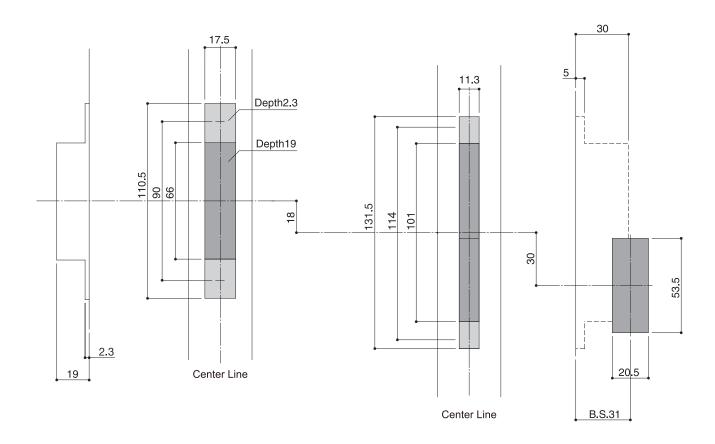

Notes

- Please read this instruction well and be sure to install the product correctly. After installation, user shall keep this instruction.
- Please pay attention, not to drop and not to damage the product by fixing tools and etc.
- Check the installation position before drilling the fixing face.
- Do not use impact drill because it may become hard to remove.
- 5 Do not remodel the product. Do not use the parts except we specify.
- 6 Do not use for a purpose other than the intended use of the product.
- After installation, please confirm whether the product was correctly installed and tightly fixed.
- Avoid installing the product where directly wet with water.

Maintenance

E-mail: info@west-inx.com

- 1 Check the product regularly and tighten the screw again if it was loose.
- Wipe with soft and dry cloth to clean products. To remove tough stains use water with soft cloth or sponge, and then wipe enough to dry up.

Regular Cleaning	To remove tough stain
Wipe with soft & dry cloth.	Use water to remove tough stain.
	Then, dry surfece with soft cloth.

