# Agaho S-line 21D



## Fitting Instruction


#### components

A: Cap 1pc

B: Stopper 1pc

C: Fixing Screw 3pcs

D: Floor Mount Unit 1pc

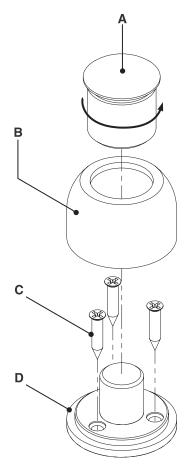

\*Drill pilot holes \$\Phi\_2\$ - 2.5mm

#### Attention

Make sure to install the product to the place where all the screws hold tightly.

If the provided screws are not suitable to the floor, please arrange anchor bolts etc.

Fix the floor mount unit after checking the installation position with the door opened.


#### Notes

- 1 Please read this instruction well and be sure to install the product correctly. After installation, user shall keep this instruction.
- 2 Please pay attention, not to drop and not to damage the product by fixing tools and etc. while installing.
- 3 Check the installation position before drilling the fixing face.
- 4 Do not use impact drill because it may become hard to remove.
- 5 Do not remodel the product. Do not use the parts except we specify.
- 6 Do not use for a purpose other than the intended use of the product.
- 7 After installation, please confirm whether the product was correctly installed and tightly fixed
- 8 Avoid installing the product where directly wet with water.

### Maintenance

- 1 Check the product regularly and tighten the screw again if it was loose.
- 2 Wipe with soft and dry cloth to clean products.
  To remove tough stains use water with soft cloth or sponge, and then wipe enough to dry up.

Regular Cleaning	To remove tough stain
Wipe with soft & dry cloth.	Use water to remove tough stain.
	Then, dry surfece with soft cloth.





WEST inx Ltd.

E-mail: info@west-inx.com Website: www.west-inx.com