
Agaho S-line 426




Fitting Instruction

component

Pull 1pc

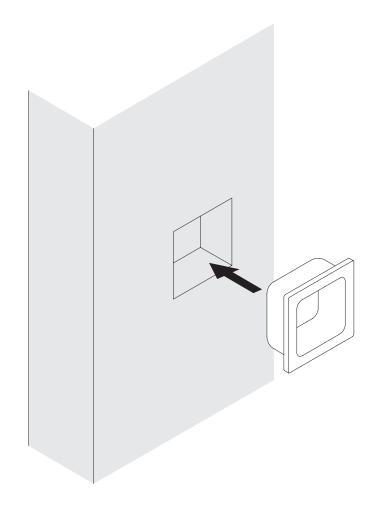

Cut-Out Dimension (mm)

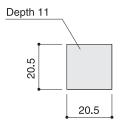

- 1. Put some glue on the backside of the pull then fit it into the cutout pocket.
- Take the Pull off once, and confirm that glue is applied over the cutout pocket. If not, add some more glue then fit it again.
- 3. After the glue fully cured verify that the Pull is firmly fitted.

Notes

- 1 Please read this instruction well and be sure to install the product correctly. After installation, user shall keep this instruction.
- 2 Please pay attention, not to drop and not to damage the product by fixing tools and etc. while installing.
- 3 Check the installation position before drilling the fixing face.
- 4 Do not use impact drill because it may become hard to remove.
- 5 Do not remodel the product. Do not use the parts except we specify.
- 6 Do not use for a purpose other than the intended use of the product.
- 7 After installation, please confirm whether the product was correctly installed and tightly fixed
- 8 Avoid installing the product where directly wet with water.

Maintenance

- 1 Check the product regularly and tighten the screw again if it was loose.
- 2 Wipe with soft and dry cloth to clean products.
 To remove tough stains use water with soft cloth or sponge, and then wipe enough to dry up.

Regular Cleaning	To remove tough stain
Wipe with soft & dry cloth.	Use water to remove tough stain.
	Then, dry surfece with soft cloth.



